

■ Shut-Down Operation



CAUTION


- After the operation is shut down, please make sure that the flame is completely extinguished before leaving the heater unattended or moving or storing it.

Observations

- Before you disconnect the power plug from the AC outlet, please make sure that the fan motor is stopped.
- Never disconnect the power plug while the heater is operating (cooling operation), it will cause nozzle to be clogged.

Turn “OFF” the operating switch, and the heater flame will be extinguished, then the cooling operation will also automatically stop after about three (3) minutes.


- If the heater is used for only a short period of time after refueling, air inside of the fuel pipe may cause the flame to flicker when the heater shutting down. This is not abnormal.

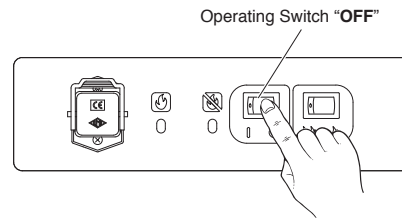


3-3. How to connect the Control Device.....

To connect the thermostat


- 1 Take the cap off the attachment plug.

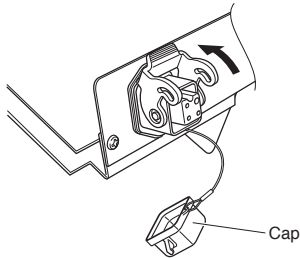


- 2 Unscrew the fixing screw and take off the internal part.

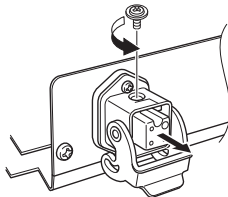


- 3 Loosen the screw on clamp 2 and disconnect either one of two wires from clamp 2.

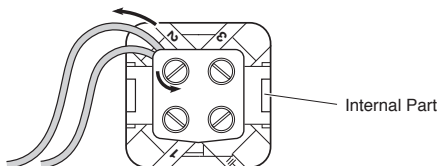


- 4 Loosen the screw on clamp 3 and connect the wire disconnected to clamp 3.

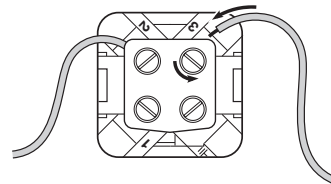

- 5 Tighten the screws on clamp 2 and 3.

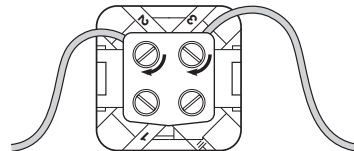

- 6 Put the internal part back and tighten the fixing screw.

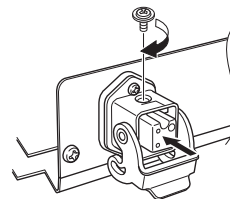

- 7 Insert the thermostat plug.